CDA

Domestic Refrigerator / Freezer

Operation Manual

PC65SS

PC65BL

PC65SC

Table of Contents

Before using the appliance

Primary features 1
Diagram of parts 2
Safety precautions 3-5
Location 6
Preparation 7-8
Operation 9
Functions 10-12

Instructions for refrigerator storage

Refrigerating storage compartment ... 13-15
Refrigerating storage precautions 16
Home bar 17

Instructions for freezer storage

Freezing storage compartment 19
Freezing storage precautions 20
Icemaker and cold water dispenser ... 21-22
Handling ice cube tray 23
Operating dispenser 24
Precautions for dispenser operation 25

Defrosting, cleaning and vacation

Defrosting 26
Cleaning 26
Vacation 27-28

General information and troubleshooting

General information 29-30
Troubleshooting 31-33

- Please read this operation manual carefully before using the appliance.
- Keep this manual properly for future reference.
- Appearance, colour and layout of the door may vary.

Primary features

① Home bar

② Ice making
Automatic icemaker, auger and cold water dispenser

③ Slim design and large volume
Slim design and large volume for both refrigerator and freezer compartments; door colour subject to customer's requirement; refrigerator shelves and crísper made of high class tempered glass

④ Freon- and frost free freezing system for deep- and quick-freezing.

⑤ Pre-cooling for defrost
Before defrosting, activate advance-cooling performance according to temperature inside the appliance to minimize temperature difference before and after defrost. In such a way, the freshness and nutrition of the food can be well preserved.

⑥ Automatic malfunction display

⑦ The appliance has been equipped with a condensing unit, noted for fan cooling, excellent performance and extended service life of compressor.

⑧ Open door warning

Diagram of parts

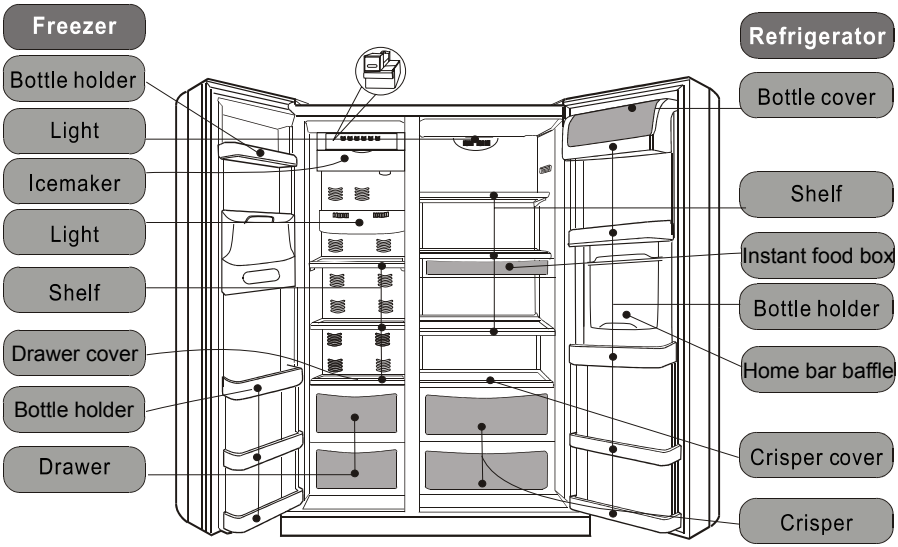

Dear customer,

Thank you for your purchasing this product.

Please read this manual carefully before using the electrical appliance that you have just purchased.

Layout of the refrigerator that you have just purchased may vary due to technical improvement of this product.

Safety precautions

This refrigerator requires a 220-240V/50Hz supply
Failure in operation and damage to the control panel, thermostat or the compressor will occur if voltage is outside the range 187-242V unless a regulator with a capacity of over 750W or higher is installed.

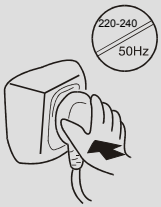

A separate earthed socket is required.
The refrigerator is supplied with a standard UK 3-pin plug. This plug must always be accessible.

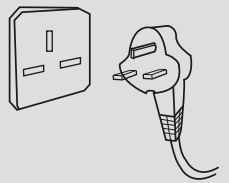

Care of external cable
*Hold the plug, not the power cable, when unplugging the refrigerator.
*Ensure that the electric cable is not trapped by the refrigerator. Do not step on the cable.
*Avoid damage to the electric cable when moving the refrigerator.

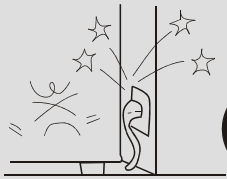

Damaged electric cable
If the electric cable is damaged or worn, turn off the refrigerator and consult CDA Customer Care for replacement

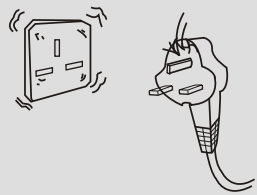

If inflammable gas leaks in the vicinity of the refrigerator
*Turn off any leaking valve;
*Open the doors and windows;
*Do not, under any circumstances, unplug electric appliances in the vicinity of the leak.

Unplug the refrigerator for the following:
*Cleaning or maintenance;
*Replacement of bulb.

Safety precautions

Never store inflammable, explosive or corrosive materials in the refrigerator.

This refrigerator should be used for food storage. It is not recommended to store microbiological or chemical materials, which have special temperature requirements.

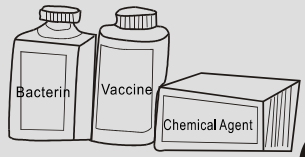

Do not install the refrigerator near petrol or other inflammable articles.

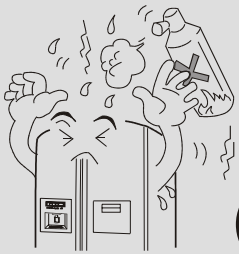

Don't place electrical plugs, extensions or microwaves on the top of the refrigerator. Don't use electric appliances inside the refrigerator.

Do not swing on or apply excessive pressure to the refrigerator door.

Do not allow children to swing on the doors.

Do not touch inside surface of freezer compartment when it is operating, especially with wet hands as hands may freeze onto the surface.

Safety precautions

Care should be taken to avoid injury to fingers when closing appliance doors. Open or close appliance doors only when no children are within the range of door movement.

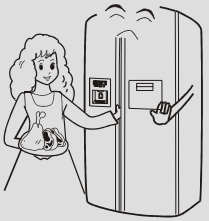

Do not spray or splash the refrigerator when cleaning the refrigerator, nor place the refrigerator in a damp area.

Under no circumstance should any external covers be removed for servicing or maintenance except by authorised CDA Service engineers.

Never store bottled beer or fizzy beverages in the freezer compartment.

Unplug the refrigerator in the event of a power interruption or during cleaning. Allow at least 5 minutes lapse before restarting the refrigerator.

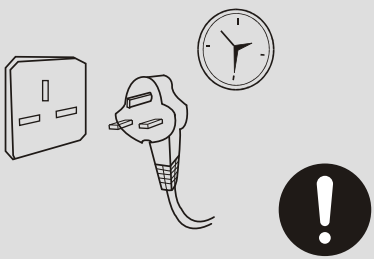

Remove the refrigerator door and door seal if the refrigerator is discarded to prevent accidental entrapment in the refrigerator.

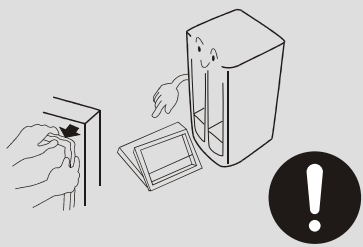

Location

The appliance should be placed on a flat and solid surface. If the appliance is placed on a plinth, flat, strong and fire-resistant materials must be used. The front foot of the appliance can be adjusted clockwise or anti-clockwise to lift or lower the appliance if it is placed on an uneven surface.

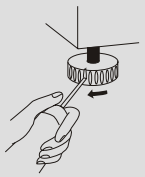

The refrigerator must be placed away from heat sources or direct sunlight.

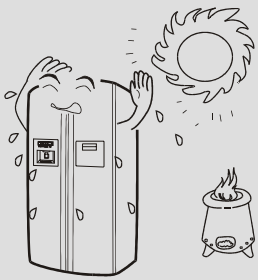

Never place the refrigerator near the water source. Clean and dry any water splashes and stains with soft cloth.

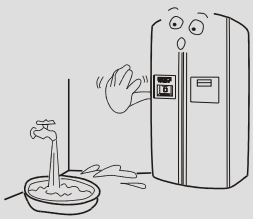

Door adjustment

If freezer door hangs below the refrigerator door apply a spanner on the slot of left screw, turn as directed by the arrow until the freezer door reaches the same height as the refrigerator door.

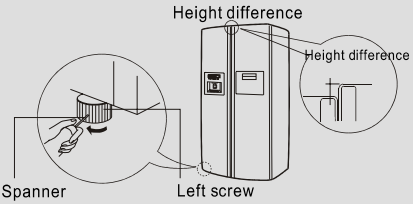

If freezer door hangs above the refrigerator door apply a spanner on the slot of left screw, turn as directed by the arrow until the freezer door reaches the same height as the refrigerator door.

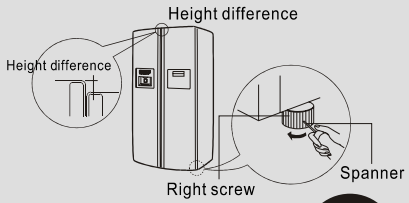

The appliance should be placed in a well-ventilated area, and a space of 10cm or more should be allowed around the refrigerator. If the appliance is built in the wall, at least 25cm and 5cm gap must be kept above and around the refrigerator, respectively.

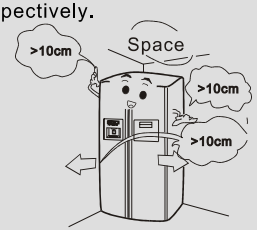

Preparation

1 Unpacking

Remove all packing materials.

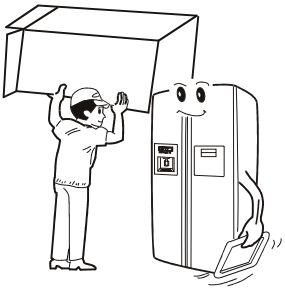

2 Check attached accessories and materials.

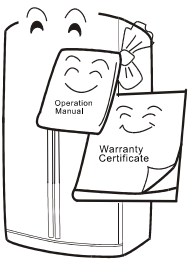

3 Ensure that the refrigerator is properly located.

(See section “Location”)

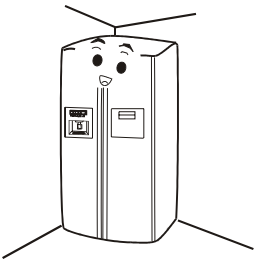

After unpacking, write down the model and manufacture number of the refrigerator on the Warranty Certificate which will be required if after sales service is requested.

Preparation

4 Clean the refrigerator before using.
(See section “Cleaning”)

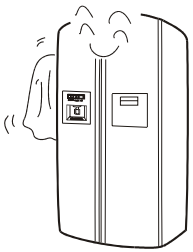

5 Time lapse before power supply
Connect the refrigerator to power source at least 6 hours after the refrigerator is sited and cleaned.

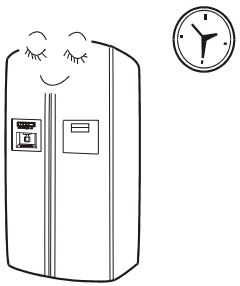

6 Fixing of bottom plinth

Open the doors,remove the plinth

and fix to the appliance as shown.

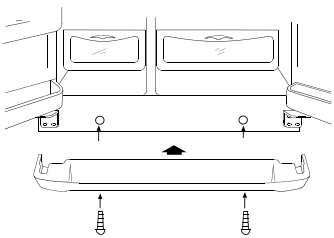

Preparation

7 Fix the door handles

First fix the bolt into the door hole.Two for one door.Take the handle out,use the big hole aiming at the bolt and push down until the handle touches the door firmly.

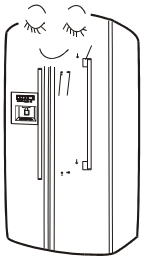

Operation

1 Connection to power supply

When appliance is connected to power supply, the position 3 indicator and CRUSH ICE modes are activated automatically with display of actual refrigerating and freezing temperatures.

The appliance is equipped with a memory system, which can ensure that latest operation mode is resumed when power is supplied after an interruption.

2 Loading the appliance with food

Load the appliance with food when the set temperature of the appliance compartments is reached.

Caution: Some time will be required for the appliance to reach the set level when the temperature is adjusted. The length of this period is determined by difference in the existing and set temperatures, the ambient temperature, the frequency with which the door is opened and closed and the amount of food in storage.

Functions

1 Control panel

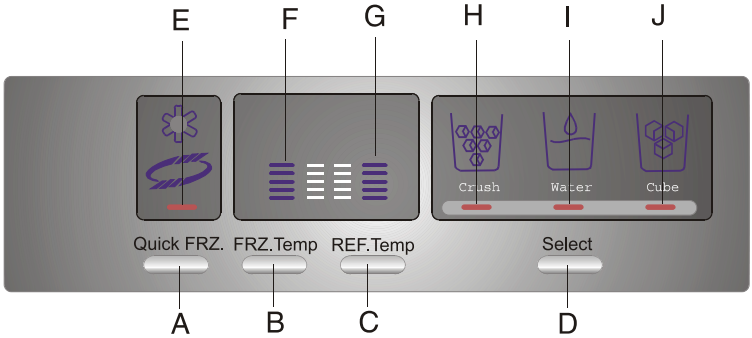

A. Super freeze
B. Freezer temperature
C. Refrigerator temperature
D. Ice/Water
E. Freezer indicator
F. Freezer temperature indicator
G. Refrigerator temperature indicator
H. Auger indicator
I. Water indicator
J. Ice cube indicator

2 Malfunction display

If control or function system does not work properly, information on the refrigerator or freezer compartment temperature will not be displayed, but the code of malfunction will be visible. Contact CDA Customer Care for technical assistance.

3 Super freeze

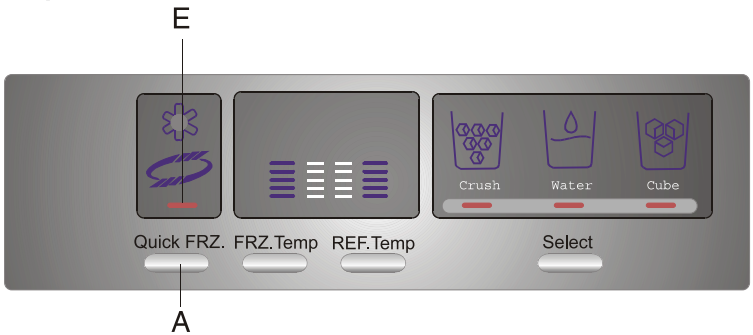

Super freeze function is designed to preserve the nutritional value of food as the food will be freezed completely in the shortest period possible. Press button A, indicator G lights, and super freeze mode is activate. If button A is pressed again, indicator E goes out and super freeze mode is deactivated.

Functions

4 Temperature setting and adjusting

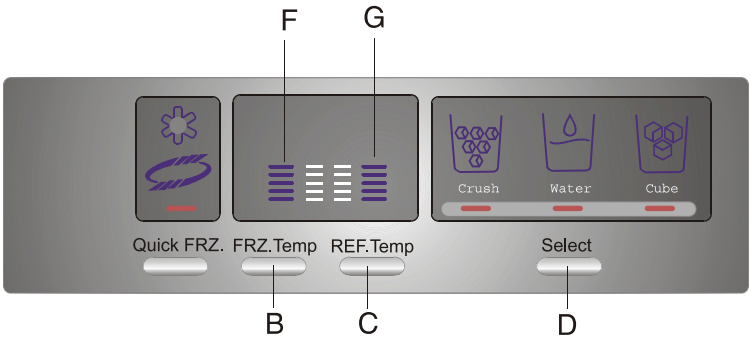

Adjusting refrigerator temperature: Press button C, indicator G blinks. Every press of button C will result in 1 scale increase until position 5 is reached. If button C is pressed again, the cycle will restart from position 1

Adjusting freezer temperature: Press button B, indicator F blinks. Every press of button B will result in 1 scale increase until position 5 is reached. If button B is pressed again, the cycle will restart from position 1

Ice/water supply: Press button D continuously for selection of crushing ice, cold water or ice cube supply. In this process, relative indicator lights, will be illuminated.

5 Open-door warning

If the door is not properly closed, or the door is opened for an extended period, the appliance buzzer will sound at intervals until the door is closed properly.

Functions

6 Control function display

30 minutes after making adjustments using the control buttons,the display will go blank. Previous display can be resumed if any button is pressed or any door opened.

7 Refrigerator ON/OFF function

Press and hold button C for 3 seconds to turn off the refrigerator.Icon G goes out. To turn the refrigerator back on,press and hold button C for 3 seconds again.Icon G will appear and the refrigerator will come back on.

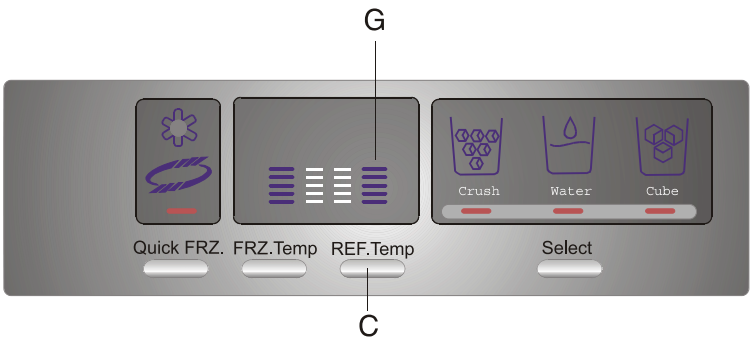

Refrigerating storage compartment

Adjusting shelf height

The food shelves can be relocated to accommodate food according to the size or height.

Food shelves can be pulled out for position adjustment or cleaning. When food shelves are to be removed, pull the shelf in direction 1, turn the shelf in direction 2 until the shelf is perpendicular and take out the shelf in direction 3.

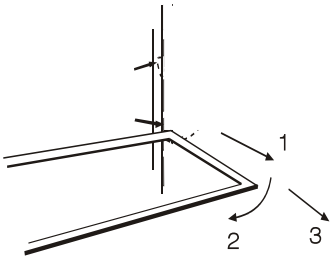

Adjusting and cleaning bottle holder

Hold two sides of bottle holder and pull consecutively in direction ① and ②, then the bottle holder will be removed.

After cleaning, bottle holder can be reinstalled to previous position or relocated if necessary.

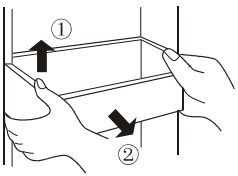

Refrigerating storage compartment

Storage areas

As cold air circulates inside the refrigerator, temperature differences exist inside the storage compartments. Different foods should be placed in different areas according to their properties.

① Eggs, butter and cheese

②+③ Beverages bottles,cans or cartons

④-⑦ General food storage

NB:Please note that raw meat should always be stored below cooked meat to prevent cross contamination.

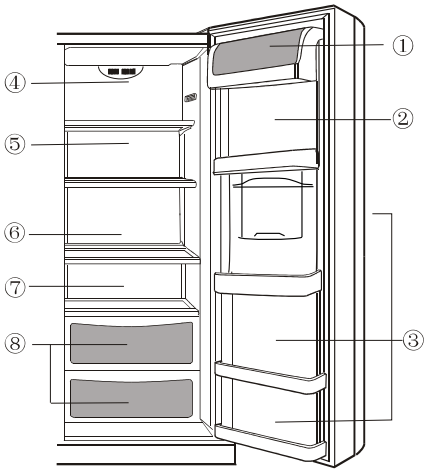

Fresh food storage

This system uses vitamin preservation technology, which can absorb strong odours and preserve nutrition and fresh status of food.

Crisper cover removal

Raise the food shelf up at the back in direction ① and pull it in direction ②. Turn the shelf in direction ③ to take it out when the door is opened as far as at 90°.

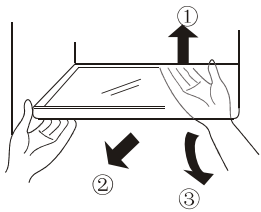

Refrigerating storage compartment

Crisper

The refrigerator has a crisper for vegetables and fruits storage with adjustable humidity value.

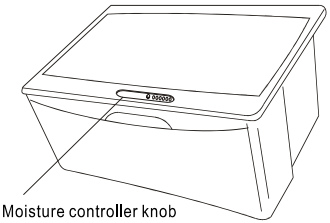

- Exposure of smaller or fewer holes will result in higher humidity for storage of cucumbers, grapes, kiwi, etc.
- Exposure of larger or more holes will result in lower humidity for storage of strawberries, oranges, beans, water melons, plums and tomatoes.
- Make sure that the front edge of crisper cover is inside the crisper. Remove the crisper before the cover. When the crisper is to be replaced, place the cover first.

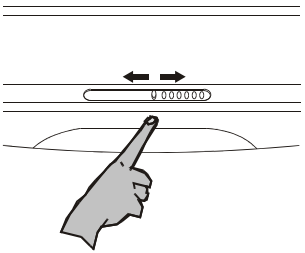

Replacing the upper lamp in refrigerator compartment

Lamp: 220-240V~/25W

Lamp holder: E14 (lamps exceeding 25W must not be used)

When replacing the lamp,

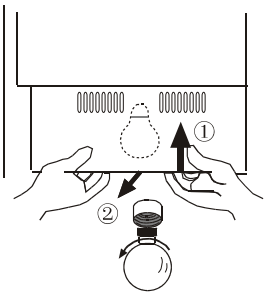

- Unplug the appliance.
- Unscrew the lamp cover .
- Hold up ① and pull out ② the lamp cover .
- Rotate the bulb anticlockwise until the lamp is released. A bulb with the same specifications should be used for replacement.
- Reinstall the lamp cover .

Refrigerating storage precautions

Hot food must be cooled to room temperature before storing in the refrigerator.

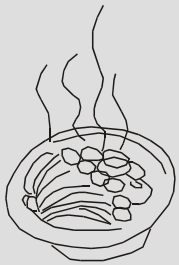

Dry any water droplets on the food before placing it in the refrigerator.

Food to be stored should be properly sealed.

Food to be stored should be sorted according to requirements. Food consumed daily should be placed in the most convenient area, this will minimize opening periods for the door.

Do not store excess quantities or weights of food
Food should be stored with spaces in between for better storage results. Never overload shelves, as they may collapse under excessive loads.

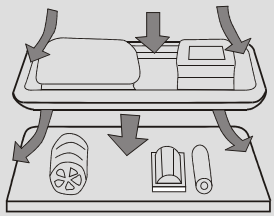

Home bar

1 Operation

Hold the handle and pull slightly.
For convenience and to conserve energy,the home bar is operational without opening the refrigerator door.
When the door of the home bar is opened,the light in the refrigerator compartment will illuminate.

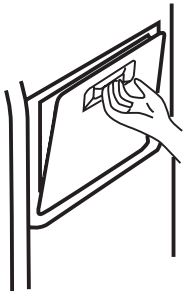

2 Home bar is designed for storage of food and beverages.

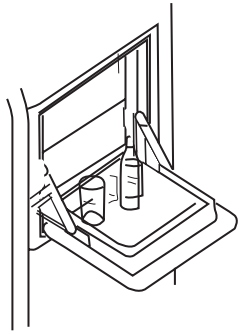

Home bar

3 Do not remove inner cover of the home bar.

The home bar will cease operation if the inner cover is removed.

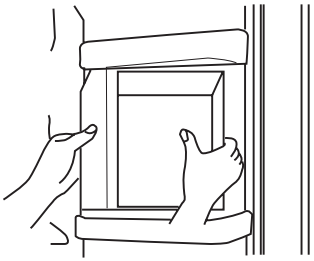

4 Keep children away from the home bar.

Accident fault may cause damages to the home bar or injuries to children.

Caution:The home bar is designed for loading and unloading the food without opening refrigerator door. Close the door of home bar immediately after loading or unloading food to avoid cold temperature losses in refrigerator compartment. If the door is not closed,the warning system will be activated.

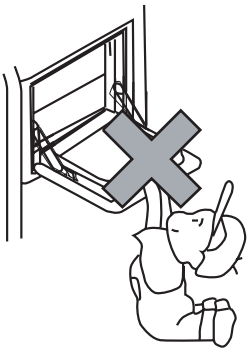

Freezing storage compartment

Long-term storage of food

As the freezer storage temperature is very low, fresh food can be stored in the freezer compartment for a long time. Food requiring long-term storage can be stored in the frozen food compartment. Follow the instructions on the package for storage period.

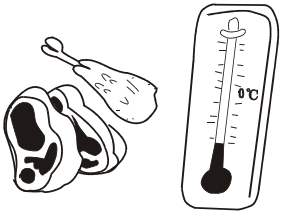

Removing food shelves

Raise the food shelf up at the back in direction ① and pull it in direction ②. Turn the shelf in direction ③ to take it out vertically while the refrigerator door is opened as far as at 90°.

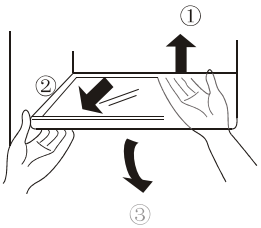

Lamp and its replacement

Lamp: 220-240V~/25W

Lamp holder: E14 (lamps exceeding 25 W must not be used)

When replacing the lamp,

- Unplug the appliance.
- Hold up ① and pull out ② the lamp cover .
- Rotate the bulb anticlockwise until the bulb is released. A bulb with the same specifications should be used for replacement.
- Reinstall the lamp cover .

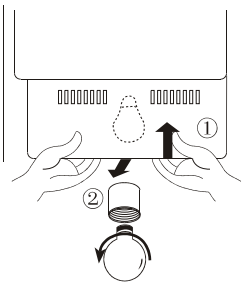

Adjusting and cleaning bottle holder

Hold two sides of bottle holder and pull consecutively in direction ① and ②, then the bottle holder will be removed.

After cleaning, bottle holder can be reinstalled to previous position or relocated if necessary.

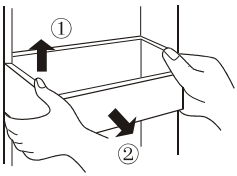

Caution: Frozen food (ice cream) should be stored close to the back wall in the freezer compartment, as the temperature in the vicinity of the door is likely to change, resulting in defrosting of the food.

Freezing storage precautions

Hot food should not be stored in the appliance until it has cooled down to room temperature.

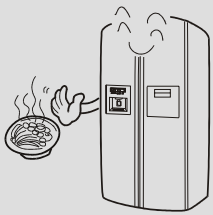

Food in small portions will freeze faster and be easier to defrost and cook. The recommended weight for each portion is less than 2.5kg.

The outside of any food packaging should be dried before storage in the freezer, and any packing materials should be odor-free, airtight, non-poisonous and nontoxic.

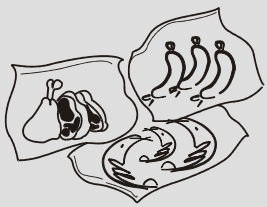

Food should be stored in accordance with any information printed on the packaging .

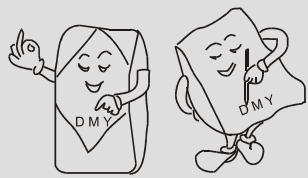

Only remove the required amount of food from the freezer compartment. Defrosted food cannot be re-stored in the freezer unless it is first cooked.

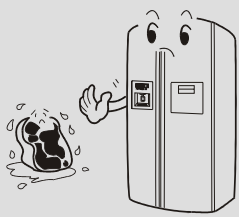

Do not load excessive quantities of fresh food in the freezer compartment. The quantity of the food in storage must comply with the cooling capacity of the refrigerator.

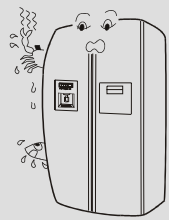

Icemaker and cold water dispenser

1 Before using the icemaker and cold water dispenser

- Water supply tube installation
  Pressure of the cold water supplied to the automatic ice maker is between 0.15~0.85Mpa.
- The required length of water pipe, usually 12 metres, should be free from kinks after being inserted in place. Excessively longer water pipes may reduce water pressure and, as a result, the capacity of ice making.
- Since the purifier does not function for sterilization of any bacterium, it is strongly recommended that drinking water be used for ice making.
- The water pipe should be away from any heat resource.
- The water pipes should be installed and tested by the installer.

- When the appliance is put into operation for the first time, keep the Cold Water button pressed for 1 minute. Do not press the button for longer than this otherwise the water valve may become too hot. to supply cold water into the tank of refrigerator/freezer compartment.

2 Precautions

- Never install the icemaker water pipe in an area with a temperature below 0°C to avoid freezing of the water pipe .
- Turn on the valve to flush the water pipe for leak test of water pipe joints. Turn off the valve when the water becomes clear.
- The icemaker will start ice cube making when internal temperature reaches or is below -15°C. The first load of ice cubes is not useable and should be discarded.
- After the appliance is installed, ensure that the water pipe is properly arranged to avoid kinks or damages.
- Installation of the icemaker must be carried out by an authorised installer.
- This icemaker can only be supplied with drinking water.
- Continuous removal of ice over one minute,or removal of ice for more than three minutes total in any one hour will cause the system to shut down for one hour.
  It is better to remove ice in short visits,leaving at least 10 minutes between visits.

Icemaker and cold water dispenser

3 Operating principle of icemaker

8 ice cubes are made in every cycle. Capacity of ice making depends on freezer temperature, ambient temperature and appliance door opening frequency.

Discard the first load of ice cubes when the appliance is operated for the first time or after an extended period of vacation.

To ensure that the ice cube tray is fully filled, manual adjustment is necessary.

Occasionally some ice cubes may stick to each other.Please separate.

4 If this is your first icemaker,

It is normal to hear noises during the ice-making process.

5 If ice cubes are stored for an extended period

Ice cubes stored for an extended period may become opaque. The ice cube tray should be cleaned regularly with warm water. The ice cube tray should be cooled down and air-dried before being replaced to avoid ice cubes sticking to the tray.

6 Non-use of ice cube tray

If the ice cube tray is not used for an extended period , remove all the ice cubes from the tray and wash the tray with warm water. Wipe the tray with a towel before replacing it in the appliance, and then turn off the valve between water supply resource and the appliance.

Caution: Allow 24 hours after the appliance is installed before the freezer compartment temperature drops down to the degree required for ice making.

Handling ice cube tray

Removing the ice cube tray

Pinch the ice cube tray at the centre and remove it from the shelf.

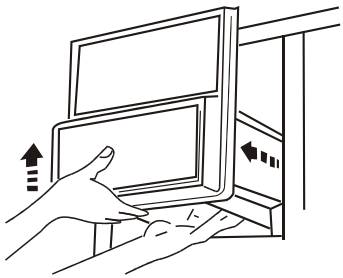

Replacing the ice cube tray

Slide the ice cube tray into the grooves by the two sides of inner liner until the clips fit to position.

If the ice cube tray does not fit the position properly, remove the ice cube tray and turn the holder structure by 90°, then replace the ice cube tray again until the clips fit into position.

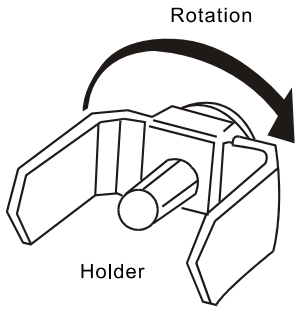

Operating dispenser

Dispenser operation

To opt for crushed ice, cool water or ice cube supply, press Ice/Water button with the glass as shown in the figure.

① Crushed ice supply

- Press desired option button, the crushed ice indicator illuminates.
- Slightly push the switch lever and crushed ice will be supplied.

② Ice cube supply

- Press desired option button, the ice cube indicator illuminates.
- Slightly push the switch lever and ice cubes will be supplied.

③ Cool water supply

- Press desired option button, the cool water indicator illuminates.
- Slightly push the switch against lever and cool water will be supplied.

When crushed ice is supplied

- Sometimes crushed ice is supplied after ice cube supply mode is set when ice cubes are delivered to the receptacle.
- The door of the ice container may get frosted especially when crushed ice is supplied frequently. The frost will evaporate automatically.
- Hold the glass to the dispenser as closely as possible to avoid spillage of crushed ice.

When cool water is supplied

- Cool water is not available immediately after the appliance is installed due to some air in the water pipes which needs to clear first. Press cool water supply button of the dispenser and wait for at least 2 minutes until the remaining air is completely dispelled by the water.
- Supplied water will become colder and colder gradually.
- Cool water does not contain ice cubes. Crushed ice or ice cubes can be added to cool water if colder cool water is desired.

Caution: Accidental access of any foreign article into the dispenser should be avoided.

Precautions for dispenser operation

Precautions

- Do not use excessively deep or narrow glasses.
- Hold the glass close to the dispenser to avoid dropping ice cubes and ice cube supply blockage.
- 5 seconds later after ice or water is supplied, the dispenser will close with a slight "phutt" sound produced.
- For ice cube supply: Hold the glass still for another 2 or 3 seconds after releasing the switch lever as remaining ice cubes may be supplied.
- For cold water supply: Hold the glass still for another 10 or 20 seconds after releasing the switch lever as remaining water may be supplied.
- Regularly clean and dry the drip tray of the dispenser.
- Some crushed ice may be supplied if ice cube supply mode is set after crushed ice supply.
- Remove remaining crushed ice in the ice dispenser to avoid blockage.
- Do not place beverage cans or food in the ice cube tray to avoid damage to the icemaker.
- Do not touch the ice dispenser or remove the icemaker cover to avoid accidental injury.
- First deliveries of water (7 glasses) and ice cubes (20 pieces) are not useable after the appliance is operated for the first time or after an extended period of vacation. Please discard them.
- Do not introduce different ice cubes made in a different ice cube tray into the dispenser, to avoid failure of ice crushing or ice supply mechanisms.
- Inefficient water supply may result in smaller ice cubes. Excessive water supply may cause water spillage to ice cube tray or stuck ice cubes. Adjust water supply tap or contact CDA Customer Care for repair.

Caution: The motor valve and relay may produce a phutt sound when ice cubes are supplied.

Defrosting · Cleaning

Defrosting

Defrosting is performed automatically.

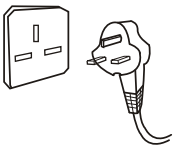

Cleaning

The refrigerator should be cleaned regularly to prevent the formation of bad odours.

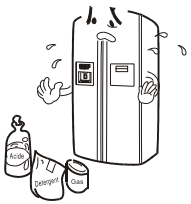

- Disconnect the power before cleaning the refrigerator.
- Clean the refrigerator with a soft cloth or sponge with mild detergent.
- Dry water droplets on surfaces of the refrigerator with a piece of cloth.

Caution: Do not use a hard brush, steel brush, detergent, petrol or other solvents, hot water, acid or alkali for cleaning.

Caution: Do not use excessive amounts of water for cleaning the refrigerator. Use a dry cloth to clean the switch and the lamp.

- Always keep the door seal clean.

Vacation

Power interruption

Even in summer, food can be stored in the refrigerator for a few hours after a power interruption.

- Don't put additional food into the refrigerator during a power interruption and try to open the door as infrequently as possible.
- If prior notice of a power interruption is given, make some ice and put it in a container in the top of the refrigeration compartment.

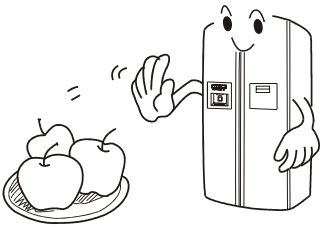

Caution: Temperature in the refrigerator will rise if there is a power interruption or technical problem, and the storage period will be reduced.

Ceased operation

If the refrigerator is to be switched off for an extended period, unplug the refrigerator and clean the refrigerator as previously described.

Keep the door of refrigerator open when the power is turned off.

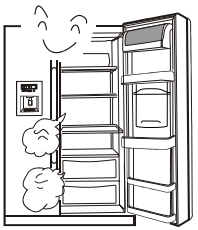

Caution: It is recommended that the refrigerator remains switched on unless it is necessary.

Caution: Do not restart the refrigerator until a period of at least five minutes has elapsed.

Vacation

Before leaving for a vacation

- If the vacation is short, remove food from the refrigerator, set to position 3 and make sure that the door of the refrigerator is properly closed.

Moving the refrigerator

- Unplug the refrigerator.
- Remove all the food.
- Secure the shelves in the cold storage compartment, vegetable and fruit tray and drawers in the freezer with tape.
- Tightly close and tape the door of the refrigerator.
- Do not tilt the refrigerator more than 45 degrees.
- Do not reconnect to the power supply for at least 6 hours after moving.

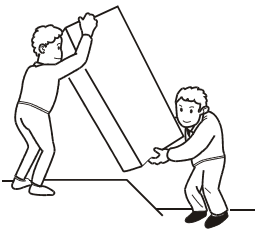

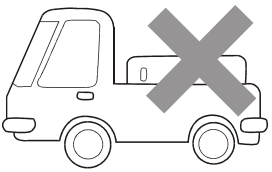

Caution: Never lay the refrigerator horizontally.

General information

The temperature of the refrigerator and the compressor will rise and the compressor will run for comparatively longer periods when the refrigerator is first started.

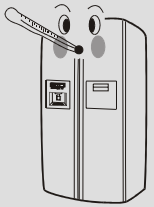

A slight sound may be heard when the appliance first startes. The sound will gradually reduce over a short period.

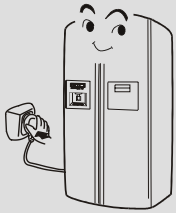

When the refrigerator is first operated, the cabinet may become warm. This is designed to prevent condensation.

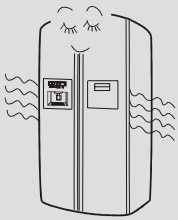

The compressor may produce a slight sound when the compressor starts or ceases operation.

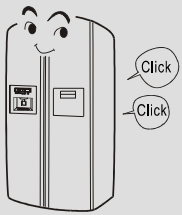

Liquid refrigerant flowing in the evaporator may produce a slight sound similar to that of flowing water. When the refrigerator stops, the backflow refrigerant may also generate that sound.

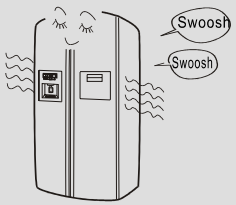

During defrosting, a slight sound may be generated. This sound is the result of defrosted water dropping to the heater and by the evaporator.

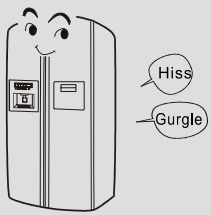

General information

The refrigerator runs in short interals,with the result that the compressor operates at alow Frequeney.The appliance therefore consumes much less power than other refrigerators and is therefore more energy efficient.This extends the life of the compressor.

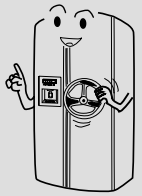

The fan of an operating refrigerator may produce a slight sound.

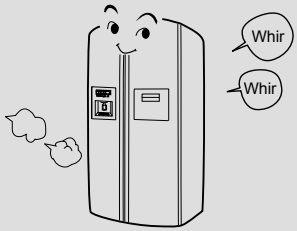

The evaporator and piping system of the refrigerator may produce a slight sound when the refrigerator operates due to ambient temperature changes.

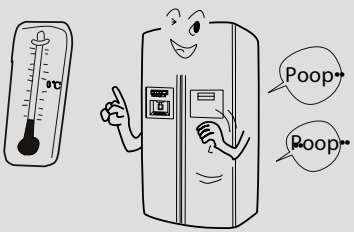

Water droplets may occur on outer surfaces and between the doors of the refrigerator due to heavy moisture in room air.Wipe clean with soft cloth.

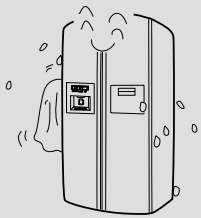

Energy efficiency specified in the technical parameters complies with CE standards and is measured under the following conditions:ambient temperature 25°C,refrigerator compartment temperature 5°C,freezer compartment temperature-18°Cand 24h continuous operation with doors closed.Actual power consumption may exceed this value if more food is in storage,ambient temperature is higher and the door is more frequently opened.

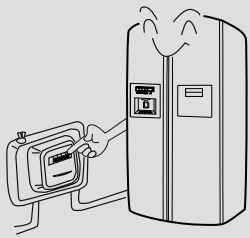

Troubleshooting

In the event that the refrigerator does not work properly, please first refer to the trouble-shooting guide below .If problems persist, contact CDA Customer Care. Information on the model, list and serial number of the refrigerator is required.

The refrigerator does not operate.

Power supply is not connected.

Lamp does not illuminate.

The bulb is not working.

Power supply is not connected.

Excessive noise



Uneven installation .

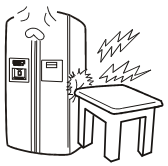

Contact between the refrigerator and a wall or other article.

Set temperature not reached

Door is not properly closed, or the door is opened for long period;

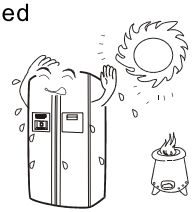

Refrigerator is in direct sunlight, or close to a heat source;

Poor ventilation caused by inadequate space around the appliance.

Troubleshooting

Failure of ice cube supply

- No ice cube in ice cube tray. Wait until ice cubes are available.
- High temperature is set for the freezer compartment. Set freezer temperature to lower degree to improve ice making efficiency.
- Water supply valve is turned off. Turn on the water supply valve.
- Refrigerator or freezer compartment door is not closed. Close all the doors of the appliance. Check door seal is clean.

Dispenser blockage

- Frost stuck on the receptacle due to operation interruption, temperature variation or high voltage. Empty, clean and dry the ice cube tray before replacing it in the dispenser.
- Ice cube blockage between ice maker and ice cube tray. Remove the ice cubes .
- Ice cubes get stuck. Operate the dispenser regularly.
- Ice cubes made in a different tray are used in the dispenser. Only ice cubes produced by this icemaker can be used for the dispenser.

Troubleshooting

Excessively long operation period of the compressor may be caused by:

- initial operation
- Large quantity of food loaded
- Door not properly closed
- Frequent opening of the door
- Hot weather
- Higher level position is selected.(refer to section"Operation")
- Poor ventilation

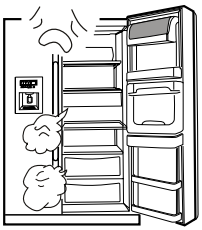

Thick frost formation on food

- Frozen food loosely packed
- Door not properly closed
- Frequent opening of the refrigerator door
- Food close to air vent

Ice maker does not operate properly.

- Ice cubes get stuck.Remove and break doen the stuck ice cubes. Only separated ice cubes can be replaced in the ice cube tray.
- If excessively smaller or larger ice cubes are supplied,adjust water supply of the icemaker.
- If stored for an extended period, ice cubes may get stuck remove and separate.
- When power supply is interrupted, remove all the ice cubes and dry the ice cube tray,as ice cubes may be defrosted and defrosted water may flow to the freezer compartment.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local authority, your household waste disposal service or the shop where you purchased the product.